VILLAGE SNOWGLOBE
INSTRUCTION MANUAL

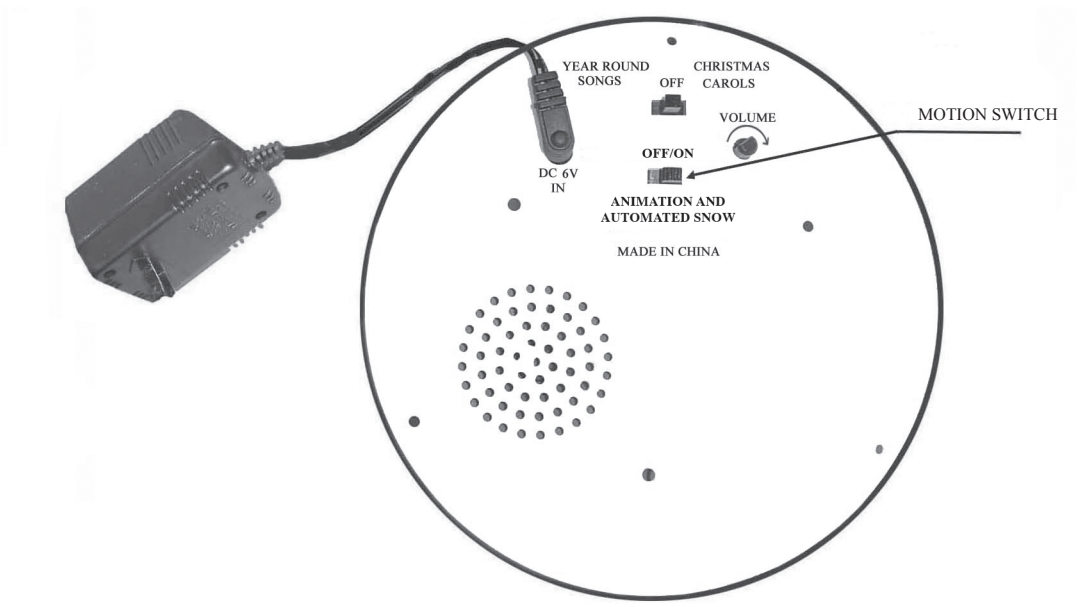

I. OPERATION:

1. Insert the AC adapter plug into the adapter jack which can be found at the bottom of the unit, then plug the AC adapter into a nearby working outlet .
2. Turn the power/song select switch to the “CHRISTMAS CAROLS” or “YEAR-ROUND SONGS” position, with the ANIMATION switch in the “OFF” position and the unit will start to play music, snow will blow and the figures will begin to move. Turn the ANIMATION switch to “OFF” if you do not want the figures to move.
3. Turn the volume control knob to adjust the loudness of the music. When the volume control is at its minimum setting, no music can be heard.
4. The Village Snowglobe plays 15 Christmas carols or 15 year-round songs continuously each time the unit is plugged in and turned on. The first song starts randomly and then play is continuous.

II. TROUBLE SHOOTING

Your VILLAGE SNOWGLOBE has been designed to give many seasons of trouble-free operation.
In the event a problem occurs please refer to the following chart for a suggested solution.

Problem	Likely Cause	Solution
No falling snow and music	No power	1. Make sure AC adaptor is plugged into a working outlet. 2. Check to see that AC adaptor plug is securly inserted into the adaptor jack.
Music too loud or too soft, or no music	Volume control incorrectly adjusted	Adjust volume control.
Figures not moving	ANIMATION ON OFF switch in wrong position	Move to “ON” position

WARNING: DO NOT PLACE THE VILLAGE SNOWGLOBE IN DIRECT SUNLIGHT OR NEAR HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER APPLIANCES (INCLUDING TELEVISIONS AND STEREOS) THAT PRODUCE HEAT. THE WATER GLOBE IS MADE OF GLASS AND IS HEAVY AND FRAGILE. NOT INTENDED FOR USE BY CHILDREN. KEEP OUT REACH OF CHILDREN.

THIS IS NOT A TOY

THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.

CAUTION: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

III. SAFETY INSTRUCTION

1. Read Instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain instructions-The safey and operating instructions should be retained for reference.
3. Heed Wamings-All wamings on the appliance and in the operating instructions should be adhered to.
4. Follow instructions-All operating and use instructions should be followed
5. Water and Moisture-The appliance should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. Heat-The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat
7. Power Sources-The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. Object and Liquid Entry-Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
9. Damage Requiring Service-The appliance should be serviced by qualified service personnel when:
   A. The power-supply cord or the plug has been damaged; or
   B. Objects have fallen, or liquid has been spilled into the appliance; or
   C. The appliance has been exposed to rain; or
   D. The appliance does not appear to operate normally or exhibits marked change in performance; or
   E. The appliance has been dropped, or the enclosure damaged.
10. Servicing-The user should not attempt to service the appliance beyond that described the operating instructions. All other servicing should be referred to qualified service personnel.

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the end user/retailer. Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the end user/retailer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday through Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for $19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

ATTN: RETURNING DEPT
2001 PRODUCTION DRIVE
BAY 2 & 3
LOUISVILLE, KY 40299

CROSLEYRADIO assumes no responsibility for units sent without prior Return Authorization.The purchaser’s bill of sale is the only proof of warranty entitlement and must accompany the unit. The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States. This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state. In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio’s high standards of Quality and Workmanship.